



For true well-being	4
Easy to operate	
Any questions about Geberit AquaClean?	4
Warranty card registration	4
Environment	4
Important notes	5
Intended use	
Declaration of conformity	5
For your safety	5
Operation	5
Explanation of symbols	5
Geberit AquaClean 5000 operation	6
Overview of controls	
Control panel	6
Integrated control panel	7
Using Geberit AquaClean 5000	8
What you should know	9
Spray shield	9
WC seat and lid with lowering function	9
Care and cleaning	10
Care instructions	
Components	. 10
Permissible cleaning agents and cleaning equipment	. 11
Non-permissible cleaning agents and cleaning equipment	. 12
Tips	. 13
Cleaning the WC seat, WC lid and housing	14
Troubleshooting	15
Malfunctions during operation	. 15
Replacing the active carbon filter	
Replacing the compensation pads	18
Emptying the storage water heater	19
Cleaning or replacing the spray nozzle	21
Removing and mounting the WC seat and WC lid	23
Technical data	24
End user warranty	25



For true well-being

The Geberit AquaClean 5000 is an enhancement solution which reclaims the source of freshness and cleanliness: water. A single water jet cleans your bottom with a pleasant and gentle feel. Application is simple yet effective. Toilet paper or a towel can be used for drying.

Easy to operate

Operation is effortless. Simply press the clearly labelled buttons on the side of the unit.

Any questions about Geberit AquaClean?

Our after-sales team will be happy to respond to your enquiries. Please contact your responsible Geberit sales company.

Warranty card registration

So that we can provide you with optimum support, please take the opportunity to register your contact details online - the process is very straightforward and takes next to no time to complete.

www.i-love-water.com

Environment

This product meets the requirements of the EU directive "Restriction of Hazardous Substances" (2002/95/EC). It is largely free from hazardous substances such as lead, mercury, cadmium and chrome VI, which are environmental pollutants.

All old Geberit AquaClean 5000 can be returned to Geberit free of charge for appropriate disposal. This arrangement applies to all EU member states as well as to Switzerland and Norway. Please contact your responsible Geberit sales company or visit the website of your respective country for collection point addresses.

Important notes

Intended use

The Geberit AquaClean 5000 is an enhancement solution which is designed for cleaning the anal area. Its use for any other purpose is deemed improper. Geberit accepts no liability for the consequences of improper use.

Declaration of conformity

You can obtain a copy of the declaration of conformity from your responsible Geberit sales company.

For your safety

- In the event of evidence of damage to the Geberit AquaClean, disconnect the unit from the mains immediately and contact Geberit Customer Service.
- If the mains connection cable is damaged, it must be replaced by a skilled person.
- Never open and repair the Geberit AquaClean yourself. Do not modify the unit or add any additional modules. The Geberit AquaClean contains live parts. Opening the unit exposes those present to fatal danger.
- Repairs may only be carried out by trained and authorised skilled persons using original spare parts and accessories.
- The Geberit AquaClean must only be connected to a mains voltage conforming to the specification plate. You will find more technical data in the chapter titled "Technical data".

Operation

- People who are not familiar with the Geberit AquaClean 5000, especially children, must be shown how to use it.
- Operation and maintenance work may only be performed by the operator or user as described in these operating instructions.
- The Geberit AguaClean 5000 may only be operated with potable water.

Explanation of symbols



DANGER

Refers to a potentially dangerous situation that may cause serious injury or death.




Refers to important information.




Geberit AquaClean 5000 operation

Overview of controls

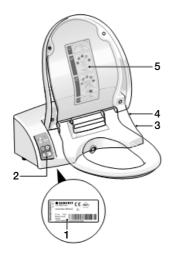


- 1 Serial number
- 2 Control panel
- 3 Power switch
- 4 Active carbon filter compartment
- 5 Cleaning instructions for end users

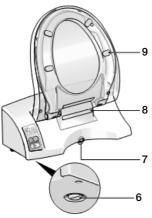

- 6 Drain screw
- 7 Spray arm
- 8 User detection
- 9 Compensation pad

Control panel

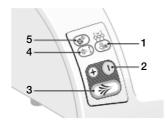

- 1 Water heater function ON/OFF/ economy mode
- 2 Spray intensity
- 3 Start and stop shower
- 4 Oscillating spray
- 5 Odour extraction unit



Integrated control panel



Starting and stopping the <shower>

Press the button: The spray arm moves into position and the shower procedure starts. The shower automatically stops after 20 s.

Press the button again: The shower stops.



<Spray intensity>

Press <+> or <-> during the shower procedure to change the spray intensity.

There are 7 spray intensity levels to choose from.

The memory function stores the most recently set spray intensity.



<Water heater function>

Press the button:

- LED lights up next to ON: Heating element is switched on.
 The water temperature is preset to 37 °C
- LED lights up next to LED lights up next to <a
- LED lights up next to OFF: Heating element is switched off



<Oscillating spray>

The oscillating spray intensifies cleaning efficiency. Press the button: The oscillating spray is activated. The function can be activated before or during the shower procedure.

The spray arm moves back and forth.

Press the button again: The oscillating spray stops.

The memory function stores the most recently used setting (activated/deactivated).



<Odour extraction unit>

When the odour extraction unit is switched on, it starts automatically after 4 to 6 s as soon as someone sits down on the toilet.

Press the button: Odour extraction unit is switched on or off.



Using Geberit AquaClean 5000

Shower concept:

 The spray nozzle is automatically cleaned with fresh water before and after each shower procedure.

You control the intensity and aim of the water jet.

The shower spray gradually cools down continuously during the shower procedure.

Prerequisites

Odour extraction unit is switched on.



Thanks to the user detection, the shower procedure can only be activated when someone sits down on the toilet. You start the toilet flush as usual by pressing the flush plate on the cistern. A toilet with mounted Geberit AquaClean 5000 can be used as a normal toilet at any time.

1 Sit down on the toilet.

Result

The odour extraction unit starts automatically after 4 to 6 s, ensuring that you do not leave any unpleasant odours behind. It stops as soon as you stand up.

2 Press the <shower> button.



Result


The shower starts and stops after 20 s.

You can interrupt the shower procedure before this by pressing the <shower>button.

What you should know

Spray shield

The spray shield can be used to test the performance of the Geberit AquaClean 5000 without anyone sitting on the toilet. You have to cover the user detection and can use the remote control to test all functions.

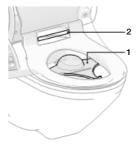

- 1 Spray shield
- 2 User detection

WC seat and lid with lowering function



Dampers cushion the WC seat and lid noiselessly and slow down closing. The seat and lid open just like any normal WC seat and lid.



Do not press the WC seat and lid down with your hand. This will damage the dampers.



Care and cleaning

Geberit AquaClean 5000 is a high-quality, easy-care product.

The WC seat and lid are easy to clean and, if necessary, to remove. Similarly, the spray nozzle can easily be replaced if it becomes blocked with limescale or clogged with dirt.




Aggressive cleaning agents can damage the material surface. Therefore, we ask that you follow the care and cleaning instructions below.

Care instructions

As a general rule, water, a mild washing-up liquid that is kind to the skin and a not scratching sponge or a soft cloth will suffice for regular cleaning.

Components

To meet demands for design and performance, the Geberit AquaClean 5000 comprises a number of different components. Therefore, we ask that you follow the cleaning instructions below, as the warranty does not cover surface damage and material damage caused by improper use.

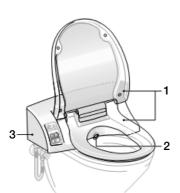

- 1 WC seat and WC lid
- 2 Spray arm
- 3 Housing

Permissible cleaning agents and cleaning equipment

Cleaning agents



Cleaning agents are permitted to have a low acid content, e.g. they may contain citric acid.



Cleaning agents should ideally be diluted with water.



Cleaning agents must be fluid.



Cleaning agents must be dermatologically tested.



The use of foaming cleaning agents is permitted.

Cleaning equipment



Sponge, eraser



Cloth, shammy leather



Toilet brush



Non-permissible cleaning agents and cleaning equipment

Cleaning agents



The use of powdery cleaning agents, such as scouring powder or scouring agent, is not permitted.



The use of corrosive cleaning agents, such as concentrated drain cleaners, is not permitted.



The use of cleaning agents which may irritate the eyes or the skin is not permitted.



The use of cleaning agents with a high chlorine concentration is not permitted.



The use of abrasive cleaning agents such as sand or scouring liquid is not permitted.

Cleaning equipment



Scratching sponge



Steel wool, steel cleaner, scrubbing sponge

Tips

Problem	Fault clearance
Use of disinfectants	Apply disinfectant with a soft cloth and wipe the components clean. Test the disinfectant for suitability.
, ,	To clean the spray nozzle, submerge it in standard limescale remover for a few hours.



Cleaning the WC seat, WC lid and housing



Do not use scratching sponges or scouring agents for cleaning. We also advise against the use of cleaners containing solvent or acid, limescale removers, vinegar and cleaning agents containing acetic acid. They corrode the surface and can lead to discolouration.

- 1 Wipe the components with a soft cloth and a mild washing-up liquid which is kind to the skin.
- 2 Dry the components with a soft cloth.

Troubleshooting



DANGER

Danger of fatal electric shock

- Never open and repair the device yourselfNever replace damaged mains connection cables yourself
- ▶ Contact customer service

Malfunctions during operation

Malfunction	Cause	Fault clearance
No function	Mains plug is not connected to power outlet	Connect the mains plug
	Power switch is OFF	Switch on the power switch
	Defective fuse on electrical distributor	Replace the fuse on the electrical distributor
	User detection IR window on upper housing section is dirty	Clean the IR window with a soft cloth
	Software error	Switch the power switch off for 30 s and then back on again
	Power supply is interrupted	Have the power supply checked by a skilled person
	Water supply is interrupted	Disconnect the mains plug, open the angle stop valve, and reconnect the mains plug after 30 s
Shower water temperature is too low	Heating element is not switched on	Set the <water function="" heater=""> to ON on the control panel</water>
	Warm-up time too short when heating element is in economy mode	Set the <water function="" heater=""> to ON on the control panel</water>
Odour extraction unit does not start	Automatic start of the odour extraction unit is deactivated	Switch on the odour extraction unit at the control panel
Shower spray is too weak or no water is spraying out at all	Spray intensity is set too low	Increase the spray intensity on the control panel
	Spray nozzle clogged or blocked with limescale	Clean or replace the spray nozzle




Operating instructions Geberit AquaClean 5000

Malfunction	Cause	Fault clearance
Spray arm does not retract	Power supply is interrupted	Restore the power supply. The spray arm will retract automatically
	Enhancement solution is defective	Switch off the enhancement solution and contact customer service
Lowering function not working	Hydraulics are defective	Contact customer service
	Left and right hinges are not closed	Close hinges fully
Unpleasant odour in spite of the odour extraction unit	Active carbon filter is spent	Replace the active carbon filter
Water is dripping onto the floor	There is a leak	Switch off the enhancement solution. Interrupt the water supply, disconnect the mains plug, and contact customer service
All three LEDs on the control panel are flashing	A safety device has switched off the enhancement solution for a short period	Switch the power switch off and back on again after 30 s


Replacing the active carbon filter

To ensure that the odour extraction unit works efficiently, you must replace the active carbon filter regularly. Under normal conditions, replace the active carbon filter every 6 months.

1 Remove the cover of the active carbon filter compartment.

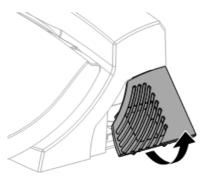

2 Remove and dispose of the spent active carbon filter.




- 3 Install the new active carbon filter.
- 4 Install the cover of the active carbon filter compartment.

Replacing the compensation pads



The Geberit AquaClean 5000 can be damaged if the compensation pads do not lie evenly on the WC ceramic appliance.

- 1 Lift up the WC seat and WC lid.
- 2 Remove the damaged compensation pad.

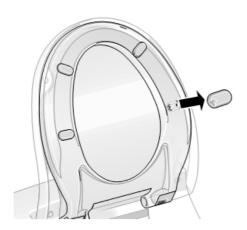

3 Install the new compensation pad.




Emptying the storage water heater

If you are not going to use the Geberit AquaClean 5000 for a long period of time, we recommend that you empty the storage water heater.




As soon as you put the Geberit AquaClean 5000 back into operation, the storage water heater fills with water again automatically. When recommissioning the unit, make sure that you first open the angle stop valve and then connect the mains plug. Otherwise, the Geberit AquaClean 5000 will not work.

1 Close the angle stop valve.

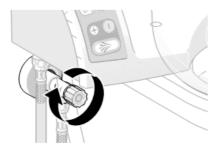


- 2 Disconnect the mains plug.
- 3 Loosen the reinforced braided hose and empty the residual water into a receptacle.

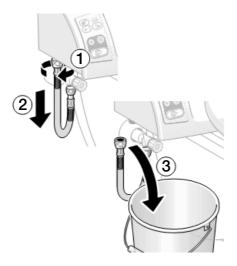



4 Unscrew the filter element by hand.

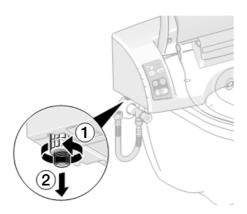

5 Place the receptacle under the drain opening and use a coin to open the drain screw by a quarter of a turn.



Result

The water from the storage water heater drains into the receptacle.

- 6 Close the drain screw.
- 7 Remount filter element and reinforced braided hose.

Cleaning or replacing the spray nozzle


- 1 Lift up the WC seat.
- 2 Press the <shower> and <+> buttons simultaneously.



Result

The spray arm extends without spraying any water.

3 Hold the spray arm with one hand and carefully remove the spray nozzle with the other.

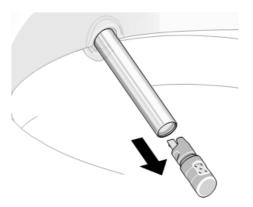

- 4 Clean and descale the spray nozzle.
- 5 Press the <shower> and <+> buttons simultaneously.

Result

The spray arm returns to its starting position without nozzle.

- 6 Clean the opening of the spray arm.
- 7 Press the <shower> and <+> buttons simultaneously.

Result

The spray arm extends without spraying any water.




Operating instructions Geberit AquaClean 5000


- 8 Connect the cleaned or new spray nozzle to the spray arm.
- 9 Press the <shower> and <+> buttons simultaneously.ResultThe spray arm returns to its starting position.

Removing and mounting the WC seat and WC lid

1 Lift up the WC seat and WC lid and push the two hinge covers outwards.

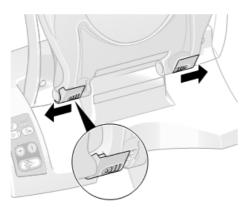

2 Remove the WC seat and WC lid from the device.

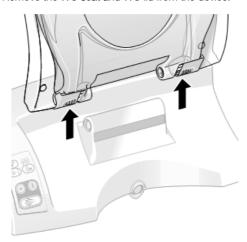

3 After cleaning, reinstall the WC seat and WC lid and push the two hinge covers inwards.

Result

The WC seat is interlocked.

4 Close the WC seat and WC lid.



Technical data

Nominal voltage	230 V AC
Mains frequency	50–60 Hz
Power consumption	850 W
Power consumption economy mode / with heating element switched on	0.5 / 6.7 W
Protection degree	IP x4
Protection class	I
Length of mains connection cable	2 m
Air volume flow rate odour extraction unit	4.4 m ³ /h
Flow rate, anal shower	1.7–3 l/min
Water temperature factory setting	37 °C
Storage temperature	-10 - +60 °C
Spray time factory setting	20 s
Number of shower pressure settings, shower spray	7
Flow pressure range	1–10 bar
Storage water heater capacity	1.65 l
Net weight	6.1 kg
Gross weight	9 kg
Maximum load WC seat / WC lid	150 kg
Operating temperature	10-40 °C

End user warranty

The following end user warranty is provided in addition to and does not affect your contractual partner's liability for defective products.

The Geberit company ("Geberit") responsible for the place of installation of the Geberit AquaClean product ("product") shall provide the end user with a warranty for the product identified by the serial number on the warranty card. The scope of this warranty is as follows:

- Geberit guarantees that the product shall be free from material defects and manufacturing faults for a period of 3 years ("warranty period") calculated from the date of installation at the end user's premises. Warranty scope:
 - Within the first two years of the warranty period, a customer service representative authorised by Geberit shall rectify any material defects or manufacturing faults free of charge by repairing or replacing the defective parts.
 - In the third year of the warranty period, Geberit shall supply replacements for defective parts free of charge to the customer service representative authorised by Geberit and contracted by the end user to repair the product.

The end user shall not be entitled to assert more extensive claims against Geberit on the basis of this warranty.

- 2. Claims can only be made under the warranty if:
 - The product has been installed and put into operation by an installation company or by customer service personnel authorised by Geberit;
 - No modifications have been made to the product; in particular, no parts have been removed, replaced or added; and
 - The product defect has not been caused by improper installation or use, nor
 can it be attributed to inadequate care or maintenance;
 - Claims shall only be made during the third year of the warranty period if the end
 user has completed the enclosed warranty card in full and returned it to the
 Geberit company responsible for the place of installation within 90 working days
 of the installation date.
- 3. This warranty applies solely to places of installation in countries in which Geberit has its own sales company or is represented by a sales partner.
- 4. The warranty is exclusively subject to the substantive law of the country in which Geberit has its place of business. The United Nations Convention on Contracts for the International Sale of Goods is expressly excluded. The exclusive place of jurisdiction for all disputes arising from or in connection with this warranty is the location of Geberit's headquarters.



First name:			
Surname:			
Company:			
Address:			
Postcode:			
Town:			
Installation date:			
Signature:			
Serial number			
Γ	٦	[] bahama beige [] white alpine	
L		[] manhattan [] pergamon	

(UK) Geberit Sales Ltd. Geberit House Academy Drive Warwick Warwickshire CV34 6QZ

T (0)1926 516 800 T (0)1926 516 809 In Eire T +44 1622 717 811

→ www.geberit.co.uk

(AE) Geberit International Sales AG Dubai Branch P.O. Box 54715, Dubai Airport Free Zone East Wing, Bldg- 4A, 4th Floor, 401, Dubai - UAE

T +971 4 204 5477 F +971 4 204 5497

→ www.geberit.ae

(ZA) Geberit Southern Africa (Pty.) Ltd. 17-15 Street, Eastgate Gardens Commercial Park Sandton, South Africa

T +27 11 444 5070 F +27 11 444 5992

→ www.geberit.co.za